





GE Interlogix

ARITECH®


ATS1203/ATS1204

8-32 Zone DGP with 3A power supply

(GB) (F)

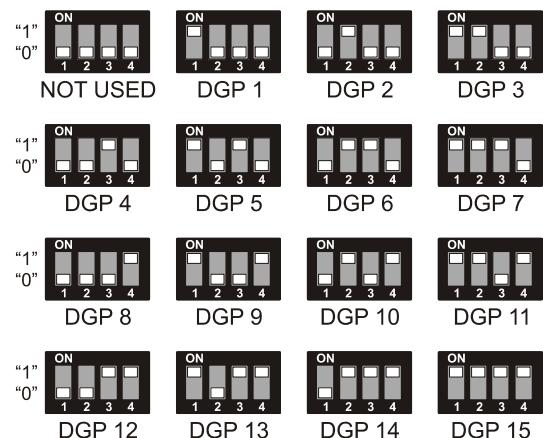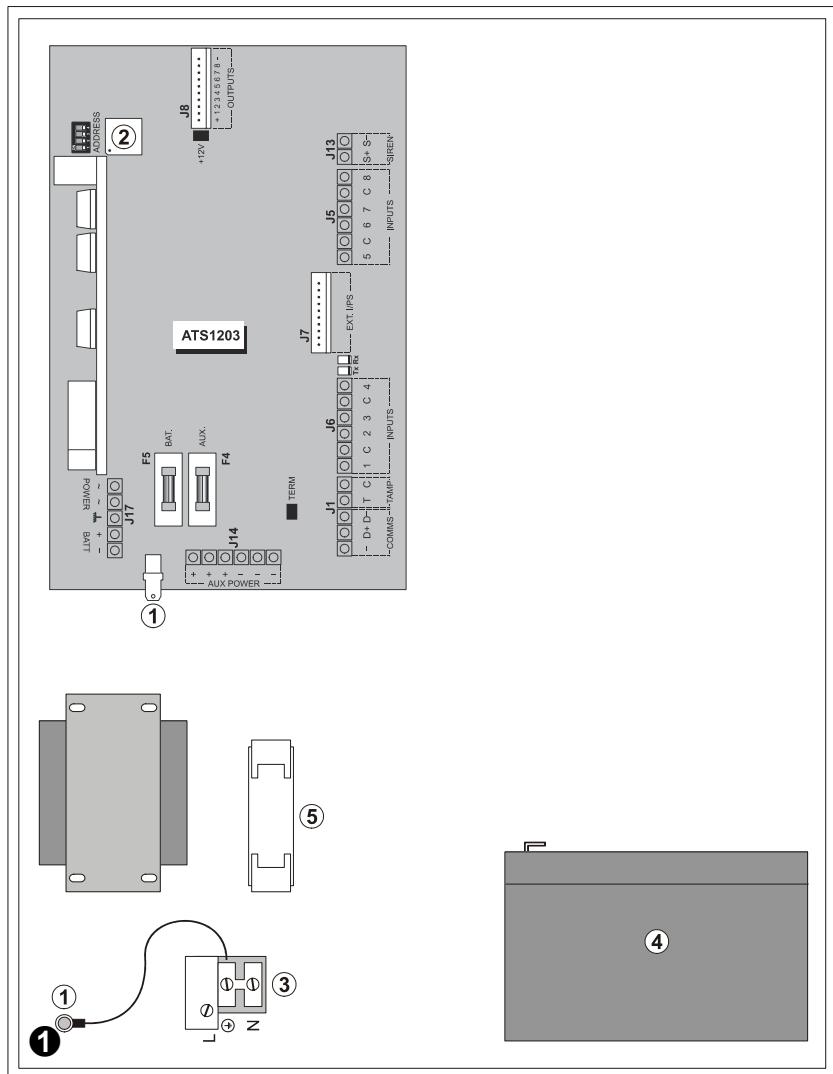


②


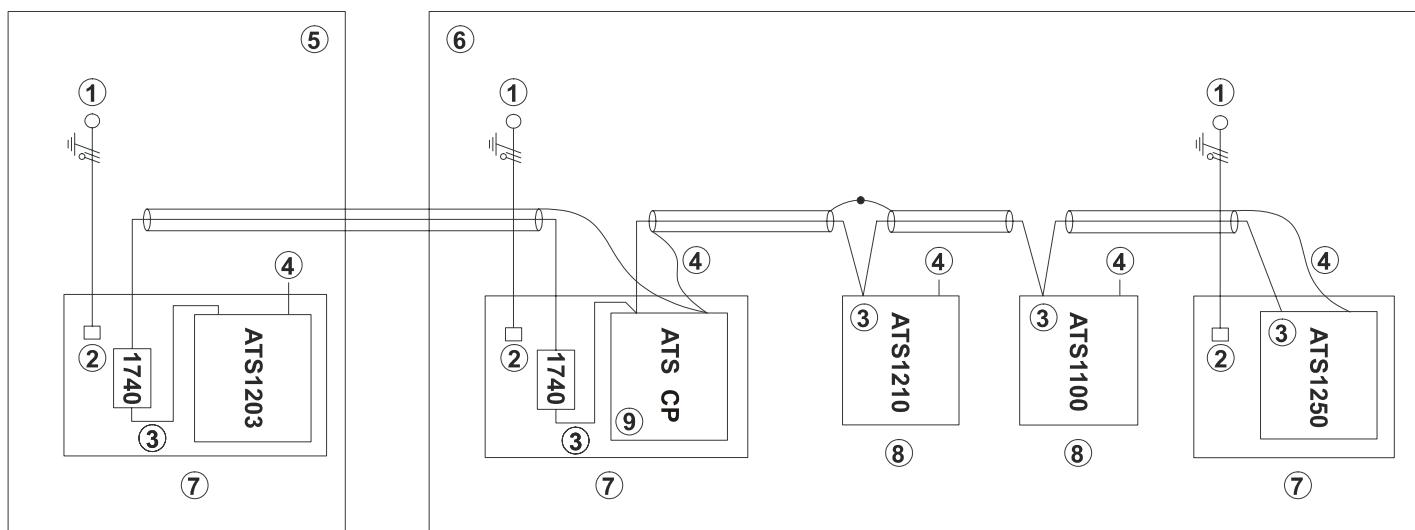


③



CE

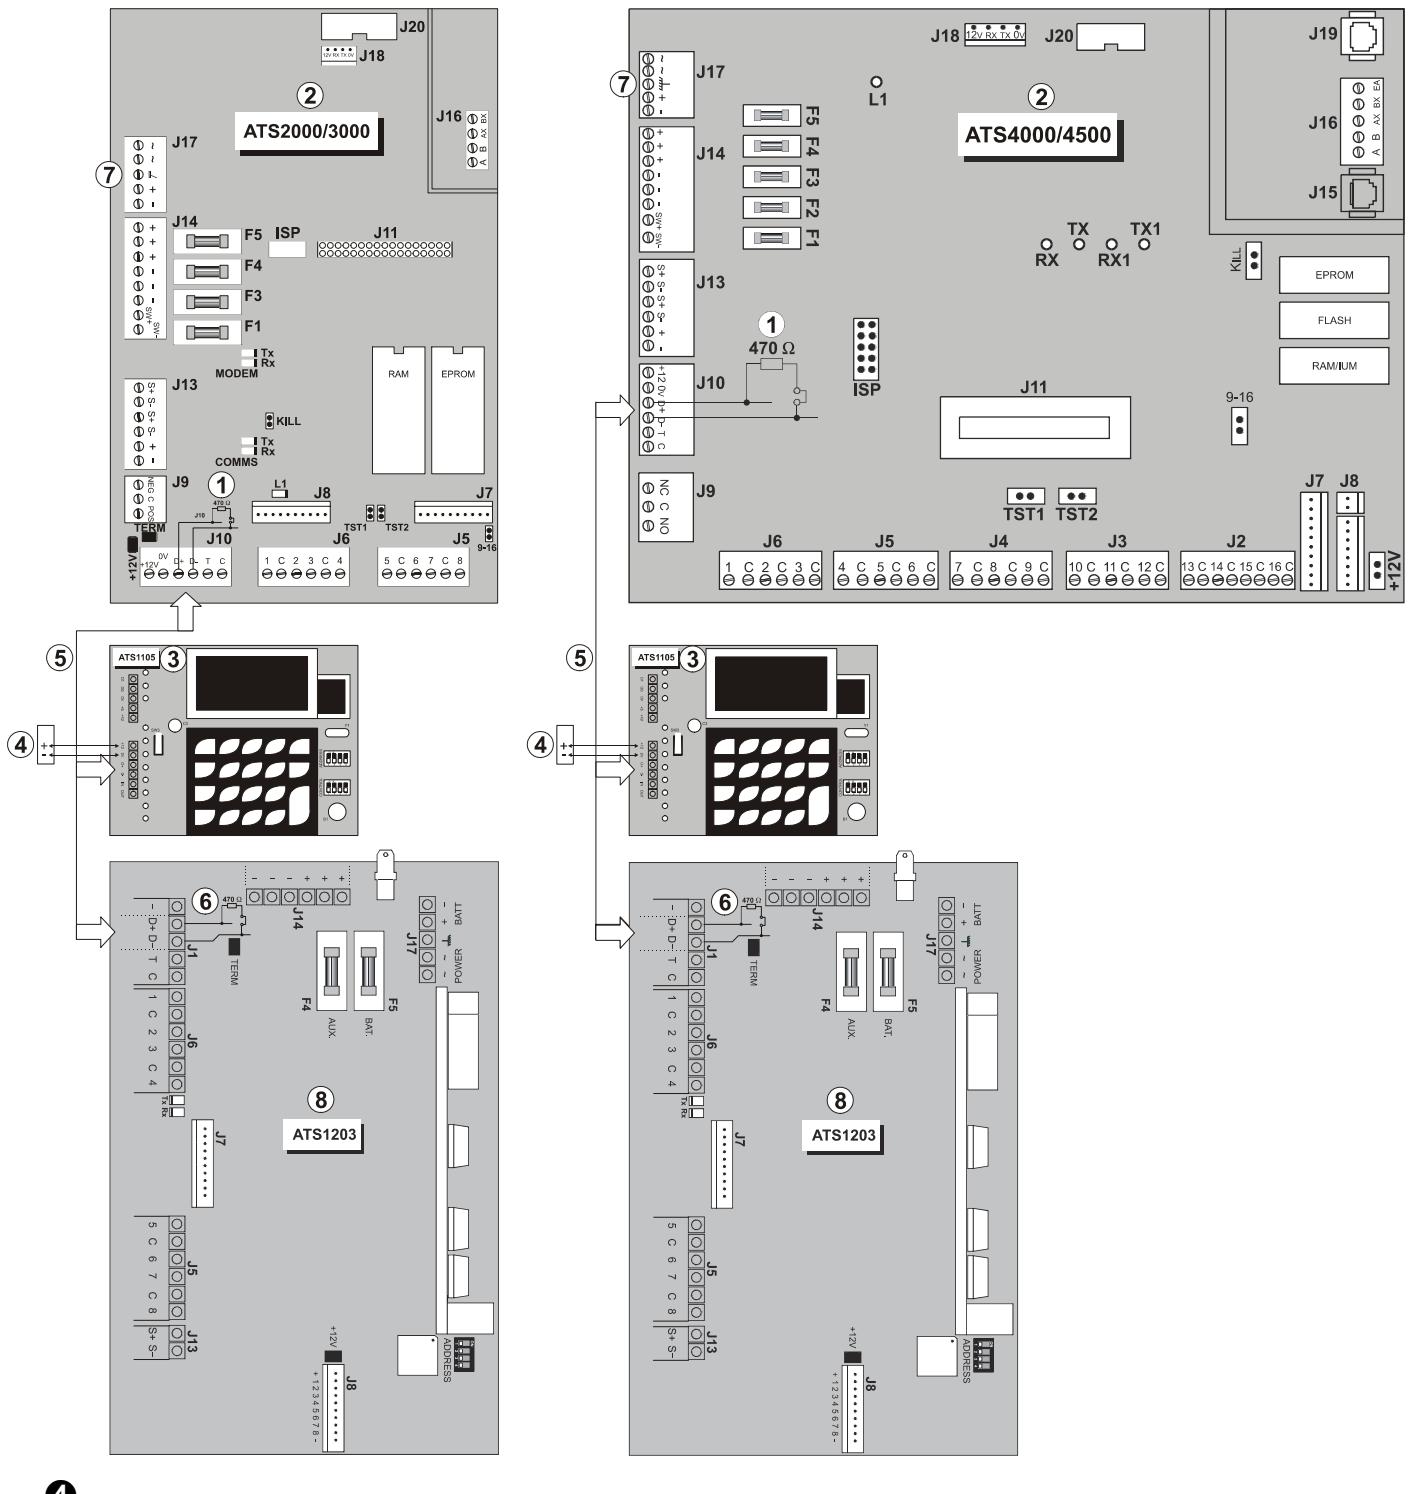

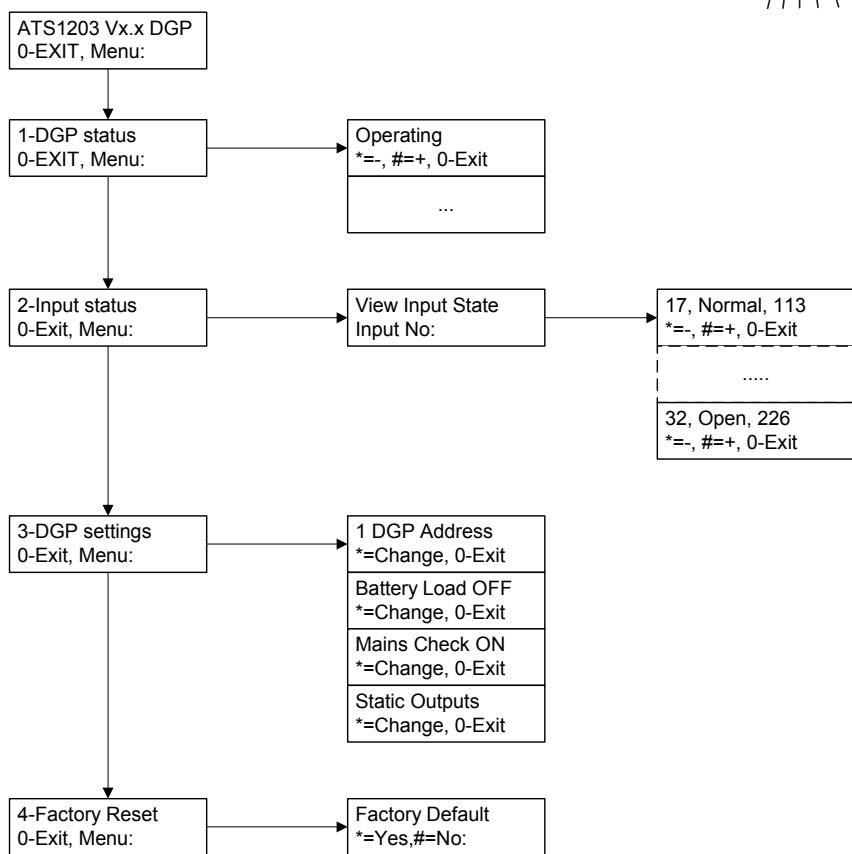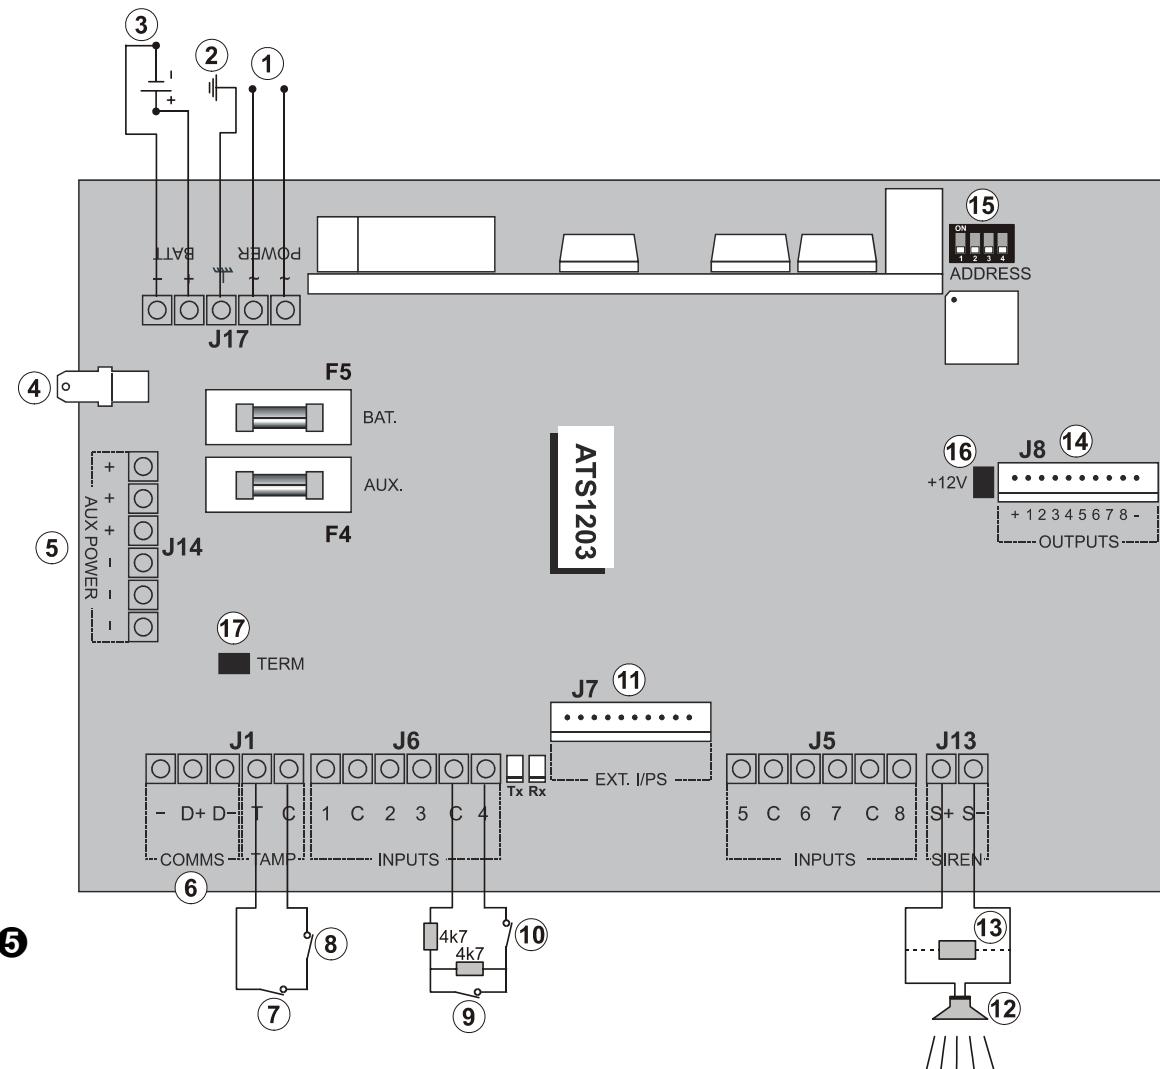

**6**

## General Installation Information

### 1. What Does it Do?

The ATS1203/ATS1204 provides zone expansion with 8 to 32 zones to ATS Control Panels with a built-in Power Supply of max. 3A (total). Both the Mains Power Supply and the Battery are monitored. The DGP also provides for 8 to 32 outputs occupying 2 DGP addresses when selected to support more than 16 outputs.

The ATS1203/ATS1204 functionality is similar to the ATS1201.

Setup of the ATS1203/ATS1204 is possible using the built-in menu that can be accessed through Titan or the ATS Control Panel menu 28.

### 2. Mains Power connection

Use the Mains Connector Terminal for connecting the mains-supply. A fixed cable or a flexible mains leading to an earthed mains outlet can be used. In case fixed wiring is used, insert a dedicated circuit breaker in the power distribution network. In all cases, the mains connection has to comply with local regulations.

#### IMPORTANT:



Disconnect the mains power before opening the cabinet!

- Disconnect AC mains plug from AC Mains wall socket. Or
- Disconnect the mains with the dedicated circuit breaker.

### 3. Mounting

The unit is mounted with screws or bolts through the four mounting holes in the base.

Ensure that the unit is mounted on a flat, solid, vertical surface such that the base will not flex or warp when the mounting screws/bolts are tightened.

Leave a 50-mm clearance between equipment enclosures mounted side by side and 25 mm between the enclosure and the sidewall.

The battery mounting facility inside the housing is only useful for steady state use of the control panel. Remove the battery for transport of the control panel.

Ensure that the wire terminals are isolated. Use tie wraps to prevent contact with any other wires or circuits in case wires break.

### 4. General installation guidelines

The ATS1203/ATS1204 has been designed, assembled and tested to meet the requirements related to safety,

emission and immunity with respect to environmental electrical and electromagnetic interference, as of current relevant Standards.

If the following guidelines are followed, the system will give many years of reliable service.

In addition to the following guidelines, during the installation of the ATS1203/ATS1204, it is essential to follow any country dependent installation requirements of local applicable standard. Only a qualified electrician or other suitable trained and qualified person should attempt to wire this system to the mains or to the public telephone network.

1. Ensure that there is a good earth available for the alarm system.
2. Maintain a separation between the low voltage and mains supply cables. Use separate points of cable entry to the control panel cabinet.
3. If, the upper and/or lower cabinet entry cable holes are used to route wiring into the control panel, always use a proper pipe fitting system by means of an appropriate conduit and junction box. For this purpose, use only materials of suitable flammability class (HB or better).
4. For Mains Power connection, use the mains connector terminal either through a permanent wiring or a flexible mains cable to an earthed mains outlet. Always use cable ties to fix mains cable, at the dedicated fixing point provided near the mains terminal connector.
  - a. In case of permanent fixed wiring, insert an easily accessible, dedicated bipolar circuit breaker in the power distribution network.
  - b. Never attempt to solder mains connection wires end where they will be wired to the terminal connectors.
5. Avoid loops of wire inside the control panel cabinet and route cables so that they do not lie on top or underneath the printed circuit board. The use of cable ties is recommended and improves neatness of the wiring within the box.
6. The battery used with this unit, must be made of materials of suitable flammability class (HB or better).
7. Any circuit connected either directly to the on board relay's contact or to external relay's contact through the on board electronic output, must be of SELV (Safety extra low voltage) operating circuit.
  - a. Mains switching relay must not be fitted inside the control panel cabinet
  - b. Always place a suppression diode (e.g. a 1N4001) across the relay coil
  - c. Use only relay with good insulation between the contacts and the coil.
8. The minimum clearance between equipment closures is 50 mm (between equipment vents).

Only use units in a clean environment and not in humid air.

## 5. Installation of ATS1203/ATS1204 (Ref. to figure ①)

- (1) Earth connection. Use also for cable screen and lid of box.
- (2) Processor
- (3) Mains power connection
- (4) Back-up battery
- (5) Pry-off tamper mounting location  
To conform with CEI 79-2 regulations at level 2, the use of the pry-off tamper is mandatory (ST580 or ST590 kit). Note: The pry-off tamper is not included with the product.  
For detailed information on the PCB, see connection diagram.

## 6. Cabling ATS1203/ATS1204 with control panel ATS2/3/4/4500

(Preferred System databus wiring – refer to figure ④)

(Refer to the ATS Control Panel installation guide for a more detailed description of the cabling)

The “TERM” link is on the first and last devices on the system databus. In a “star” wiring configuration, the “TERM” link is only fitted on the devices at the ends of the two longest system databus cable runs.

- (1) TERM link fitted (first device on local databus)
- (2) Control Panel ATS20/26/30/36/40/45/4600
- (3) ATS1105 LCD RAS (TERM switch not set to ON)
- (4) Separate 12 V power supply. (Required if RAS is more than 100 m from the nearest panel or DGP. Connect “-“ to “-“ of the databus.)
- (5) Preferred data cable type is WCAT 52 (2 pair twisted).
- (6) TERM link fitted (last device on local databus)
- (7) Earth connection to connect shield\*
- (8) Any data gathering panel like ATS1201, ATS1203, ATS1210, ATS1220 or ATS1250.

\*Connect cable shield to one device only.

See: System databus connection and Earthing details on page 5 and 6.

## 7. Connection diagram ATS1203/ATS1204 (ref. to figure ⑤)

- (1) AC connection from transformer
- (2) System earth (see details page 6)
- (3) 12 V battery
- (4) Earth connection for cable screens (shields)
- (5) Auxiliary power supply output
- (6) System databus
- (7) Normally closed panel tamper contact
- (8) Normally closed panel tamper contact
- (9) Normally closed Alarm Contact
- (10) Normally Closed Tamper Contact
- (11) Interface to ATS1202 input expanders

- (12) External 8 Ohm siren speaker or siren
- (13) 1K resistor must be fitted if external siren not connected
- (14) Clock-out Interface to plug on output expansion or 4-way non-clocked output expansion (e.g. ATS1810).
- (15) Dipswitch to set DGP Address
- (16) Link to select +12Vdc to output board
- (17) Link to terminate databus

J1	RS485 system databus & box tamper connections.
J5/J6	Zones
J7	Interface to ATS1202 input expanders
J8	Clock-out Interface to plug on output expansion or 4-way non-clocked output expansion (e.g. ATS1810).
J13	External siren
J14	Auxiliary power output.
J17	AC connection from transformer and battery power

## 8. Important notes

- 1. If the battery load resistor is enabled, the 8<sup>th</sup> output is no longer available for non-clocked output expansion boards.
- 2. In case the DGP is set for 2 DGP's to enable all 32 outputs, the control panel programming should be set up to poll the DGP address **and** the address + 1.

## 9. Links

TERM	Termination of databus. Only to be used on first and last device on the local databus.
+12V	Connect +12VDC to output board

## 10. DGP dipswitch settings (ref. to figure ②)

Address	Select DGP address. Set switches 1 - 4 to <b>OFF</b> to disable the DGP. (See fig. 2 for correct address settings.)
---------	---

## 11. LEDs

Tx	Red LED flashes when remote units (RAS and DGP) are replying to polling.
Rx	Yellow LED flashes when panel is polling remote unit(s). It must always be active.

## 12. System databus connection

The system databus is used to connect Data Gathering Panels (to provide extra zones) and Arming Stations to the ATS control panel. Remote devices can be up to 1.5 km from an ATS control panel.

Arming stations and Data Gathering Panels must be connected via a 2 pair twisted shielded data cable from the system databus connection. (WCAT 52 is recommended)

The shield of the data cable should be connected to earth at the ATS control panel or any other earth point. However it should be left disconnected at the other end.

It is recommended that where the distance between the arming station and the nearest device is more than 100 meters, a separate power supply be used to power the arming station.

To power the arming station, **do not** connect '+' from the system databus. Connect '+' of the local power supply to '+' on the arming station and connect 0 volts from the power supply **and** 0 volts from the system databus to the arming station terminal marked '-'.

See also Cabling ATS1203/ATS1204 on page 5.

### 13. Mains connection

Make sure that before connecting the mains power to the control panel, the mains power supply is disconnected using a circuit breaker or by removing the AC from the wall socket. (see page 4).

When installing the mains power, use a strain relief like cable ties and coupling PG16's to ensure proper wiring. In all cases, local regulations should be applied.

### 14. Earthing (ref. to figure ③)



#### WARNING!

Correct Earthing procedures must be followed

- **Earthing of one cabinet containing several devices.**

All devices designed for the system have earth connections via metal studs to the metal housing. Take care, that these metal studs make good connection to the housing (beware of paint).

The earth connections of every piece of equipment in the system, can be used for connecting the shielding of shielded cables. However: never connect the shield at both sides to earth. If a device is placed in a plastic housing the earth lug of this device does not have to be connected.

- **Earthing panels in a single building.**

In one building several cabinets or devices are earthen to safety ground.

The safety earth of this building has to be checked by a licensed contractor.

- **Earthing panels in more buildings.**

If the wiring extends to separated buildings, more than one common earth system will be used. Use isolator/repeaters ATS1740 to isolate the system databus. In this way the system is protected against variations in earth potential.

- **Shielding**

The shielding of all shielded cables used in the system, should only be connected at ONE side to one common earthing point in a building (see Fig. 3) If a shielded databus cable is routed via more than one plastic device the shielding from incoming and out-going cable has to be connected.

- **Explanation of fig. ③**

- (1) Mains power with local earth
- (2) Mains power connector

- (3) System databus
- (4) Earth lug
- (5) Building 1
- (6) Building 2
- (7) Device in metal housing
- (8) Device in plastic housing
- (9) ATS20/26/30/36/40/45/4600 control panel

### 15. Connecting the data gathering panel to a control panel

Refer to the control panel installation guide for instructions.

### 16. Zone and output numbering

Control panel	1 - 16	DGP8	129 - 144
DGP1	17 - 32	DGP9	145 - 160
DGP2	33 - 48	DGP10	161 - 176
DGP3	49 - 64	DGP11	177 - 192
DGP4	65 - 80	DGP12	193 - 208
DGP5	81 - 96	DGP13	209 - 224
DGP6	97 - 112	DGP14	225 - 240
DGP7	113 - 128	DGP15	241 - 256

#### Output numbering

A DGP can have a maximum of 16 outputs available as relays or open collectors outputs. The output numbers are the same as the 16 zone numbers allocated to the DGP address.

The ATS1203/ATS1204 can also support 32 outputs. Enable this by selecting "2 DGP addresses" in menu 3- "DGP settings" (first option). Be aware that the ATS Control Panel needs to be setup to poll both DGP addresses.

**Note:** If the Battery Load test resistor is enabled, the 8<sup>th</sup> output follows the battery test (except when using clocked output devices).

#### Zone numbering

The ATS1203/ATS1204 has 8 zones that can be expanded using the ATS 1202 (8 zones) to a maximum of 32 zones. If the number of zones exceeds 16, then the zones are taken from the next DGP address and DGP ceases to exist.

e.g. DGP 1 has 24 zones (zones 17 to 40). The next DGP in the system must now be addressed and polled as DGP 3, because zones 33 to 40 on DGP 1 have been taken from DGP 2.

The unused zone numbers in the system (zones 41 to 48) must be programmed in the zone database as Type 0.

### 17. Programming (ref. to figure ⑥)

The ATS1203/ATS1204 provides a menu through which a number of options can be set. In addition the status of the ATS1203/ATS1204 itself or inputs can be viewed.

To enter the programming menu for the ATS1203/ATS1204:

- Enter menu 28 of the Control Panel installer menu.
- Press 1[ENTER] followed by the DGP address selected and [ENTER] to enter the DGP menu. The display now shows "ATS1203" followed by the version number.
- Press [ENTER] to proceed to the menu or press the menu number followed by [ENTER] to go to a menu item directly.

### **Menu 1, DGP status (ref. Figure ⑥)**

This menu lists different types of information regarding settings, DGP addresses to poll, inputs ranges, output ranges, current consumption, etc. To view all data, enter the menu and press [ENTER] to view the next item.

### **Menu 2, Input status (ref. Figure ⑥)**

Shows the current status of all inputs that have been enabled and the digital value of the status. The range that is available can be viewed in the DGP Status. The input numbers used are related to the address selected. See Zone and output numbering on page 6.

To view the status, enter the first input to view. The selected input status is shown. Press [\*MENU] to view the previous or [ENTER] to view the next input.

### **Menu 3, DGP settings (ref. to figure ⑥)**

Menu 3 provides for some additional settings related directly to the DGP functionality. Use the [\*MENU] key to change the settings. Use [ENTER] to accept the settings and move to the next item.

- DGP configuration:** selects the number of inputs and outputs used. Available settings:

"1 DGP Address"	Allows for max 16 inputs/outputs to be connected. Shows as "DGP: n" where n is the selected DGP address in menu 1, DGP status ( <b>Default setting</b> )
"1 DGP+exp"	Allows for max 32 inputs/16 outputs to be connected. Shows as "DGP: n + exp" where n is the selected DGP address in menu 1, DGP status.
"2 DGP Addresses"	Allows for max 32 inputs/outputs to be connected but requires DGP polling to be enabled for the DGP address and the DGP address + 1. Shows as "DGP: n + m" where n is the selected DGP address and m is the address + 1 in menu 1, DGP status.

**2. Battery Load:** Select if the battery load resistor should be enabled on the 8<sup>th</sup> output. It will follow the battery test and add an additional 68 Ohm during the test. This option is required for regulations (SKAFOR). **Default is OFF**

**3. Mains Check:** Enable/disable mains check. Set to OFF in case no mains power supply is used to avoid mains fail being reported. **Default is ON**.

**4. Static Outputs:** Select whether to support static outputs (max 8) or clocked outputs (max 32, depending on DGP configuration). **Default is Static Outputs**.

### **Menu 4, Factory reset (ref. to figure ⑥)**

Use this menu to set all DGP configurations to default factory settings.

## **Technical specifications**

<b>1. Mains Power Specifications</b>	
Mains Input Voltage (J17 – AC)	230 VAC ± 10% - 50Hz ± 10%
Current consumption at 230V~	360 mA
Main board supply voltage	23 VAC typical

<b>2. Power Supply Specifications</b>	
Power supply voltage	13.8 VDC ± 5%
Power supply current	2.9 A max. at 13.8 VDC ± 5%
Auxiliary Power output (J14)	13.8 VDC ±5% For current see table below  <u>Note:</u> maximum permanent current to power devices external to the control equipment in the absence of alarm conditions.
Battery Power output (J17 – BAT)	13.8 VDC ± 5%. For current see table below
Battery Type and max. capacity	Lead acid rechargeable      2 x 25Ah 12 V nom. (BS129) <sup>1</sup>
Main board consumption	75 mA at 13.8 VDC ± 5%

### 3. Available Aux/Battery current based on backup

Approval Grade	Time (h)		Output	Current (mA)					
	Discharge	Charge		Battery capacity					
				7.2Ah	18Ah	25Ah	36Ah	50Ah	
EN 1&2	12	72	Aux	490	1300	1800	1800	1800	
			Battery	2235	1425	925	925	925	
EN 3&4	60	24	Aux	40	220	330	500	550	
			Battery	2685	2500	2395	2225	2175	
Nfa2p II	36	30	Aux	110	360	550	850	1000	
			Battery	2615	2350	2200	1875	1725	
Nfa2p III	72	30	Aux	20	150	230	380	580	
			Battery	2700	2600	2500	2345	2100	
VdS B	30	24	Aux	150	500	700	1050	1100	
			Battery	2575	2225	2025	1675	1625	
VdS C	60	24	Aux	40	220	330	500	550	
			Battery	2685	2500	2395	2225	2175	

### 4. General Feature Specifications

End of line resistor (standard)	4.7 kΩ 5% 0.25 W (2.2 kΩ or 10 kΩ)		
Standard on board output	Ext.siren (J13 - S+/S-)	Electronic output	Rating: 1 A at 13.8 VDC
Housing	Dimensions:	315x445x88 mm	Colour Beige
Environmental	Operating temperature		0° to + 50 °C (certified +5° +40°C)
	Humidity		95% non condensing
	IP protection grade		IP30

### 5. Fuses

F4	Auxiliary power & siren	F2 A, 20x5	F5	Battery	F3 A, 20x5
	Mains fuse *	F630 mA, 20x5			

\* Mains Fuse is part of the mains terminal block.



**WARNING!** Before removing the mains fuse, mains power must be disconnected (see page 4)!

## Recommendations d'installation

### 1. Que fait il?

L'ATS1203/1204 est un DGP 8 zones / 16 sorties extensible à 32 zones / 16 sorties pour les centrales ATS avec chargeur intégré 3A max et supervision secteur et batterie. Ce DGP peut également gérer jusqu'à 32 sorties si il a été paramétré comme gérant plus de 16 sorties. Il occupera alors l'emplacement de deux DGPs.

Les fonctions de l'ATS1203/1204 sont identiques à celle de l'ATS1201.

Le paramétrage de l'ATS1203/1204 s'effectue aussi bien par TITAN que par le clavier de la centrale via le menu avancé n°28.

### 2. Connexion au secteur

Utilisez le bornier secteur pour connecter la centrale. Vous pouvez brancher un câble fixe ou un cordon d'alimentation flexible dans une prise secteur mise à la terre. Si vous utilisez un câble fixe, insérez un circuit de protection dédié dans le réseau de distribution d'alimentation. Dans tous les cas, la connexion au réseau secteur doit être conforme aux réglementations locales.

#### IMPORTANT:



Débranchez l'alimentation 220V avant d'ouvrir le coffret !

- Débranchez la prise secteur CA de la prise murale, ou
- Coupez l'alimentation secteur à l'aide du circuit de protection dédié.

### 3. Montage

Pour installer la centrale, insérez des vis dans les quatre trous de fixation situés au fond de l'appareil.

Assurez-vous que l'unité est installée sur une surface verticale solide et plate afin d'éviter que la base ne fléchisse ou ne se déforme lorsque vous resserez les vis.

Laissez un espace de 50 mm entre les coffrets des appareils installés côté à côté et de 25 mm entre le coffret et le mur latéral.

L'emplacement de montage de la batterie est pour un usage fixe. Retirer la batterie en cas de transport de la centrale.

Bien attacher les câbles dans la centrale pour éviter les court-circuits en cas de rupture d'un câble.

### 4. Recommandations générales d'installation

L'ATS1203/1204 ont été conçue, assemblée et testée conformément aux normes en vigueur notamment en

matière de sécurité électrique, et d'immunité aux interférences électromagnétiques. Installée dans les règles de l'art, cette centrale vous donnera satisfaction de nombreuses années. En plus de ces recommandations d'installation, il est essentiel de respecter les normes en vigueur et de ne faire effectuer les raccordements au réseau électrique et téléphonique par du personnel qualifié.

1. S'assurer de la présence d'une bonne terre à proximité de la centrale.
2. Ne pas mixer les câbles secteur et basse tension. Utiliser des entrées de câbles séparées.
3. Si les entrées de câbles supérieures ou inférieures sont utilisées pour passer des câbles, utiliser des presses étoupes adaptés et conformes à la classe de flammabilité HB minimum.
4. Le raccordement du cable secteur 2P + Terre se fait par un câble rigide ou souple connecté au bornier prévu à cet effet. Bien penser à attacher le câble par le rilsan fourni.
  - a. En cas de raccordement secteur permanent, faites installer un disjoncteur dédié dans le tableau électrique.
  - b. Ne pas souder les extrémités du câble secteur qui doivent être vissées dans le bornier secteur.
5. Eviter d'avoir des boucles de câble à l'intérieur du coffret et trop proche de la carte mère de la centrale aussi bien en dessous qu'au dessus. Faire un câblage propre en guidant proprement et en attachant les cables.
6. La batterie utilisée doit être de matériaux conformes à la classe HB minimum.
7. Tout circuit commandé par le relais intégré de la centrale ou piloté par les sorties électroniques de la centrale doit être antiparasité.
  - a. Ne pas installer de relais de puissance dans le coffret centrale
  - b. Mettre une diode de roue libre en parallèle sur la bobine des relais
  - c. Utiliser des relais de bonne qualité d'isolation bobine / contacts.
8. La distance entre chaque coffret doit être de 50 mm minimum (pour la ventilation).
9. Utiliser uniquement dans des environnements sains et non humides.

### 5. Installation ATS1203/ATS1204 (voir ①)

- (1) Borne de terre.utilisée également pour la tresse du câble et le couvercle du coffret.
- (2) Processeur
- (3) Raccordement secteur
- (4) Batterie de sauvegarde
- (5) Emplacement de l'autoprotection à l'arrachement

L'autoprotection à l'arrachement est obligatoire (kit ST580 ou ST590) pour être conforme à la norme CEI 79-2 niveau 2. Note : Le kit d'autoprotection à l'arrachement n'est pas inclus dans ce produit.  
Pour plus d'informations sur les raccordements de la carte mère, voir le diagramme de connexion.

## 6. Câblage ATS1203/ATS1204 avec les centrales ATS2/3/4/4500

(Diagramme de connexion du bus de données du système: recommandations sur les raccordements - voir ④)

(Reportez-vous au guide d'installation de la centrale ATS pour obtenir plus d'informations sur le raccordement)

Le cavalier « TERM » est mis en place sur le premier et le dernier module du bus de données du système. Dans une configuration de câblage en étoile, ce cavalier n'est installé que sur les modules situés aux deux extrémités de la plus longue branche du bus de données du système.

- (1) Cavalier TERM installé (premier module d'un bus de données local)
- (2) Centrale ATS2000/3000/4000/4500
- (3) RAS avec LCD ATS1105 (l'interrupteur TERM n'est pas réglé sur ON)
- (4) Alimentation 12 V séparée. Nécessaire si le RAS est situé à plus de 100 m de la centrale ou du DGP le(s) plus proche. Connectez le « - » sur le « - » du bus de données.
- (5) Type de câble de données recommandé : WCAT 52 (2 paires torsadées avec écran)
- (6) Cavalier TERM installé (dernier module d'un bus de données local)
- (7) Borne de terre pour connexion du blindage
- (8) N'importe quel boîtier de bus d'extension E/S (ATS1201, ATS1210, ATS1220 ou ATS1250, par exemple)

**Voir les sections:** Connexion du bus de données du système page 10.

## 7. Diagrammes des connexions ATS1203/ATS1204 (voir ⑤)

- (1) Connexion CA provenant du transformateur.
- (2) Terre du système (voir détails page 11)
- (3) Batterie 12 V
- (4) Borne de terre pour les écrans des câbles
- (5) Sortie d'alimentation auxiliaire
- (6) Bus de données du système
- (7) Contact d'autoprotection à l'ouverture normalement fermé
- (8) Contact d'autoprotection à l'arrachement normalement fermé
- (9) Contact d'alarme normalement fermé
- (10) Contact d'autoprotection normalement fermé
- (11) Connecteur vers les extensions d'entrée ATS1202
- (12) Haut-parleur de sirène externe (8 Ohm) ou sirène
- (13) Une résistance d'1 K doit être installée si la sirène externe n'est pas connectée.

- (14) Sortie de données pour connecter des cartes de sorties ou une simple carte 4 relais
- (15) Dipswitch d'adressage du DGP
- (16) Cavalier pour sélectionner le +12Vdc pour la carte 8 sorties
- (17) Cavalier pour la terminaison du bus

J1	Connexions du bus de données RS485 et de l'autoprotection.
J5/J6	Zones
J7	Connecteur vers les extensions d'entrée ATS1202
J8	Sortie de données pour connecter des cartes de sorties ou une simple carte 4 relais.
J13	Sirène extérieure (S+/S-) et zones
J14	Sortie d'alimentation auxiliaire.
J17	Connexions du transformateur et de la batterie

## 8. Notes importantes

1. Si la résistance de charge batterie est activée, la 4 ème sortie de la deuxième carte ATS1810 n'est plus disponible.( sortie 8)
2. Dans le cas où le DGP est paramétré en tant que 2 DGPs pour bénéficier de 32 sorties, la centrale doit également scruter les 2 DGPs.

## 9. Cavaliers

<b>TERM</b>	Termination du bus de données. Uniquement sur le premier et le dernier module du bus de données du système.
<b>+12V</b>	Alimentation +12Vcc des cartes de sorties.

## 10. Dipswitch du DGP (voir ②)

<b>Adresse</b>	Définit l'adresse du DGP Mettre les dipswitches 1 à 4 sur <b>OFF</b> pour désactiver le DGP. (Voir les différentes adresses sur la fig. 2.)
----------------	---

## 11. LEDs

<b>Tx</b>	Le voyant rouge clignote lorsque la centrale scrute des modules distants. Il doit toujours être activé.
<b>Rx</b>	Le voyant jaune clignote lorsque des modules distants (RAS et DGP) répondent à une scrutination.

## 12. Connexion du bus de données du système

Le bus de données du système est utilisé pour connecter les boîtiers de bus d'extension E/S (afin de fournir des zones supplémentaires) et les stations d'armement à la centrale ATS. Les modules distants peuvent être éloignés de 1,5km (maximum) des centrales ATS.

Les stations d'armement et les boîtiers de bus d'extension E/S doivent être connectés par un câble de données blindé

à deux paires torsadées à partir de la connexion du bus de données du système .

Le blindage du câble de données doit être mis à la terre au niveau de la centrale ATS et doit être laissé débranché à toute autre extrémité.Si la distance entre la station d'armement et le module le plus proche dépasse 100 mètres, vous devez utiliser une alimentation électrique distincte pour alimenter la station d'armement.

Pour alimenter la station d'armement, ne connectez **pas** l'extrémité « + » provenant du bus de données du système. Connectez le « + » de l'alimentation locale au « + » de la station d'armement et connectez ensemble le 0v de l'alimentation **et** le 0v du bus de données du système au terminal de station d'armement portant le signe « - » .

Voir Câblage ATS1201 page 10.

### 13. Connexion secteur

S'assurer avant de faire le raccordement dans la centrale que l'alimentation secteur soit déconnectée soit par un fusible au disjoncteur soit par la prise murale. (voir page 9).

Lors du raccordement du cable secteur dans la centrale, bien attacher le cable avec le rilsan fourni.respecter dans tous les cas les réglementations en vigueur.

### 14. Mise à la terre (voir ③)



#### ATTENTION!

**Vous devez suivre les instructions de la procédure de mise à la terre**

- Mise à la terre d'un coffret contenant plusieurs cartes.**

Tous les éléments constituant le système peuvent être connectés à la terre par des cosses.

Vous devez vous assurer que ces cosses offrent une bonne continuité vers le coffret (attention à la peinture).

Le raccordement à la terre de chaque élément du système peut être utilisé pour raccorder l'écran de chaque câble blindé.

Si un module est placé dans un coffret en plastique, il est inutile de connecter la borne de terre.

- Raccordement à la terre de coffrets dans un même bâtiment.**

Les équipements d'un même bâtiment seront systématiquement raccordés à la terre.

La terre sera testée par un électricien qualifié.

- Cas de plusieurs bâtiments.**

Si le câblage s'étend à plusieurs bâtiments, plusieurs systèmes de mise à la terre seront utilisés. Utilisez dans ce cas les répéteurs/isolateurs ATS1740 pour isoler le bus de données du système. De cette façon, le système sera protégé contre les différences de potentiel existant sur la terre.

- Blindage des câbles**

Le blindage des câbles utilisés dans le système doit être raccordé à une seule terre commune du bâtiment et d'UN SEUL côté (voir la figure). Si le câble du bus de données blindé passe par plusieurs modules en plastique, la continuité du blindage du câble devra être assurée sur toute sa longueur.

- Explication de figure. ③**

- (1) Alimentation secteur avec terre locale
- (2) Connecteur secteur
- (3) Bus de données du système
- (4) Borne de terre
- (5) Bâtiment 1
- (6) Bâtiment 2
- (7) Module dans un coffret métallique ousing
- (8) Module dans un coffret en plastique
- (9) Centrale ATS de type ATS2000/3000/4000/4500

### 15. Connexion d'une carte d'extension E/S à une centrale

Reportez-vous au guide d'installation de la centrale pour obtenir des instructions à ce sujet.

### 16. Numérotation de zone et de sortie

Control panel	1 - 16	DGP8	129 - 144
DGP1	17 - 32	DGP9	145 - 160
DGP2	33 - 48	DGP10	161 - 176
DGP3	49 - 64	DGP11	177 - 192
DGP4	65 - 80	DGP12	193 - 208
DGP5	81 - 96	DGP13	209 - 224
DGP6	97 - 112	DGP14	225 - 240
DGP7	113 - 128	DGP15	241 - 256/255*

#### Numérotation des sorties (\*max. 255 sorties)

Un DGP peut disposer d'un maximum de 16 sorties disponibles en tant que sorties relais ou collecteurs ouverts. Les numéros de sortie correspondent aux 16 numéros de zones attribués à l'adresse du DGP.

L'ATS1203/1204 peut gérer 32 sorties. Activer cette fonction en choisissant "2 DGP addresses" dans le menu 3-"DGP settings" (première option) du menu avancé 28, 'vers autres modules'. Ne pas oublier de faire scruter les 2 DGPs par la centrale !!.

**Note:** Lorsque la résistance de charge batterie est activée, la 4 ème sortie de la seconde carte ATS1810 (huitième sortie) suit le test batterie (non valable pour les cartes ATS1811).

#### Numerotation des zones (256 zones)

L'ATS 1203/1204 dispose de 8 zones qui peuvent être étendues, grâce à l'ATS 1202 (8 zones), à un maximum de 32 zones. S'il existe plus de 16 zones sur un DGP, ces zones sont alors prises sur l'adresse du DGP suivant, qui cesse alors d'exister.

Example: DGP 1 dispose de 24 zones (zones 17 à 40). Le DGP suivant sur le système doit alors porter l'adresse et être scruté en tant que DGP 3, car les zones 33 à 40 du DGP 1 ont été prises sur le DGP 2.

Les numéros de zones non utilisés sur le système (zones 41 à 48) doivent être programmés dans la base de données de zones en tant que Type 0.

## **17. Programmation (voir figure ⑥)**

Un menu de paramétrage est disponible pour l'ATS1203/1204 permettant de paramétrer un certain nombre d'options. De plus, l'état de l' ATS1203/1204 ou des zones peut être visualisé.

Pour entrer en mode programmation de l'ATS1203/1204:

4. Aller au menu avancé 28 du menu installateur.
5. Taper 1[ENTER] suivi du n° du DGP suivi par (ENTER) pour entrer dans le menu du DGP. L'affichage montre "ATS1203" suivi du numéro de version.
6. Taper [ON] pour faire défiler les menus ou le numéro de menu suivi par ENTER pour y accéder directement.

### **Menu 1, DGP status (voir figure ⑥)**

Ce menu liste toutes les informations relatives au paramétrage de ce DGP, adresse(s) DGP(s) scruté(s), valeur des zones, sorties disponibles, consommation de courant, etc. Parcourir le menu par la touche ON.

### **Menu 2, Input status (voir figure ⑥)**

Affiche l'état de chacune des zones présente dans ce DGP ainsi que leur valeur analogique.

Pour voir l'état d'une zone, entrer le n° de celle ci. Son état apparaît alors. Taper [\*MENU] pour voir la zone précédente ou [ENTER] pour voir la prochaine.

### **Menu 3, DGP settings (voir figure ⑥)**

Le menu 3 permet le paramétrage du DGP. Utiliser la touche [\*MENU] pour changer un paramètre. Utiliser [ENTER] pour accepter ce paramètre et aller à la prochaine option.

**1. DGP configuration:** choix du nombre de zones et de sorties.options possibles:

"1 DGP Address"	DGP 16 zones/16 sorties. Vu dans le menu 1 comme DGP 'n' où 'n' est le n° du DGP ( <b>valeur par défaut</b> )
"1 DGP+exp"	DGP 32 zones /16 sorties. Vu dans le menu 1 comme DGP 'n + exp' où 'n' est le n° du DGP.
"2 DGP Addresses"	DGP 32 zones/32 sorties.vu dans le menu 1 comme DGP 'n + m' où 'n' est le n° du DGP et 'm' le DGP suivant virtuel.  La centrale doit scruter 2 DGPs !!

**2. Battery Load:** Indique si la résistance de charge batterie sera active sur la 8ème sortie. Cette sortie suit le test batterie et nécessite une résistance additionnelle de 68 Ohm durant le test. (norme SKAFOR). **OFF par défaut**

**3. Mains Check:** active/désactive la surveillance du secteur. Mettre sur OFF dans le cas où le secteur n'est pas présent pour éviter les défauts secteur d'être envoyés. **ON par défaut.**

**4. Static Outputs:** Sélectionne soit 2 cartes 4 relais max (ATS1810), soit jusqu'à 4 cartes ATS1811 / 2 cartes ATS1820 (dépendant de la configuration du DGP). **Static Outputs par défaut (ATS1810 \* 2 max)**

## **Menu 4, Factory reset (voir figure ⑥)**

Utiliser ce menu pour faire un retour aux paramètres usine du DGP.



Fusible secteur *	F630 mA, 20x5			
-------------------	---------------	--	--	--



**ATTENTION!** Avant de retirer le fusible secteur, déconnecter le courant secteur au disjoncteur principal de l'installation (voir page 8)!





SECURITY LIFESAFETY COMMUNICATIONS



## MANUFACTURERS DECLARATION OF CONFORMITY

For

**Product identification:**

Model/type : ATS1203      BOM revision level : Tot BOM ATS1203 11\_12\_03  
(PCB rev: C / Nov 2003)

: ATS1204      BOM revision level : Tot BOM ATS1204 09\_03\_04  
(PCB rev: C / Mar 2004)

Category (description) : DGP Module (Data Gathering Panel)

Brand : GE-InterlogiX/Aritech / SLC Technologies / Sentrol/ESL/ITI/Caddx/Casi Rusco

**Manufacturer:**  
GE Interlogix B.V.  
Kelvinstraat 7  
6003 DH Weert  
The Netherlands

**EU Representative:** -

Concerning	EMC	Safety
<b>A sample of the product has been tested by:</b>	GE Interlogix : Kelvinstraat 7, 6003DH Weert, The Netherlands Bicon : Steenovenweg 5, 5708HN Helmond, The Netherlands	
Test report reference	ATS1203_CE_Spec_1_3, CEQP_ATS1203_ATS1204, GEI-20031127-N1	
Applied standards	EN50130-4(1995) +A1(1998) EN61000-6-3(2001) EN55022(1998) + A1(2000) + A2(2003) EN61000-3-2 (2000) EN61000-3-3(1995)+A1(2001)	EN60950(1992)+A11(1997)

**Equipment class identifier (RF products falling under the scope of R&TTE)**

Not Applicable     None (class 1 product)     (class 2 product)

**Means of conformity**

We declare under our sole responsibility that this product is in conformity with Directive 89/336/EEC (EMC), 73/23/EEC(LVD), 93/68/EEC (Marking) based on test results using (non)harmonized standards in accordance with the Directives mentioned.

Signature of representative/manufacturer: Raoul van Bergen  
  
Manager Control & Communications GE Interlogix B.V.  
Kelvinstraat 7  
6003 DH Weert  
The Netherlands

Place : Weert  
Date : 11 March 2004